

DF250RTR Assembly Guide

Table of content

- 1. Remove Cardboard Box**
- 2. Remove Metal Crate**
- 3. Layout all parts**
- 4. Install Handlebar**
- 5. Attach Speedometer Assembly**
- 6. Attach Left Side Combination Switch**
- 7. Attach Left Side Clutch Lever Assembly**
- 8. Remove Front wheel shaft from the crate**
- 9. Install Front Wheel**
- 10. Install Front Brake Caliper**
- 11. Install Foot Gear Lever**
- 12. Install Mirrors**

1. Remove Cardboard Box



2. Remove Metal Crate



3. Layout all parts




4. Install Handlebar



Make sure to watch out for the bracket and not to scratch the gas tank.



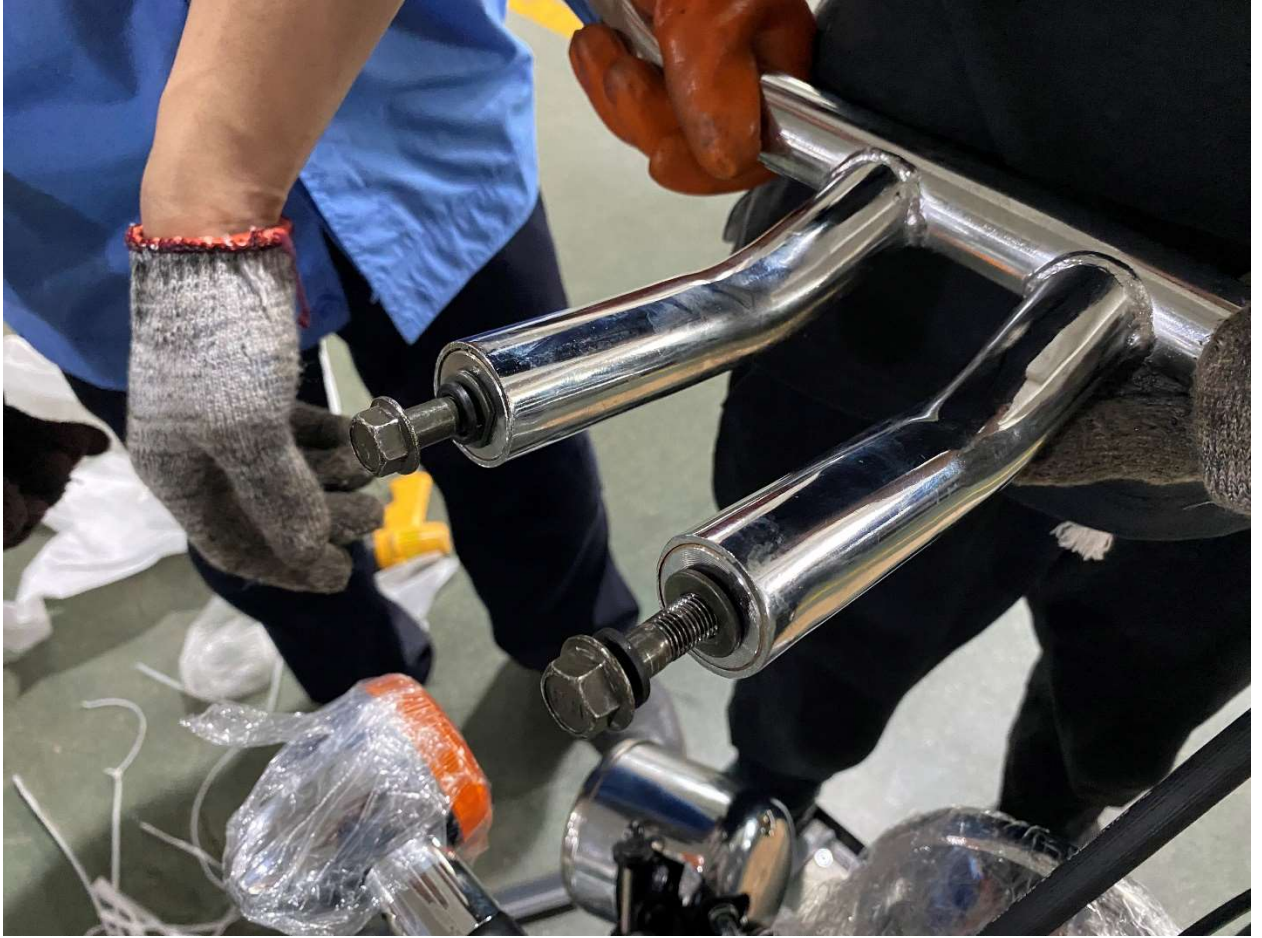





5. Attach Speedometer Assembly








6. Attach Left Side Combination Switch



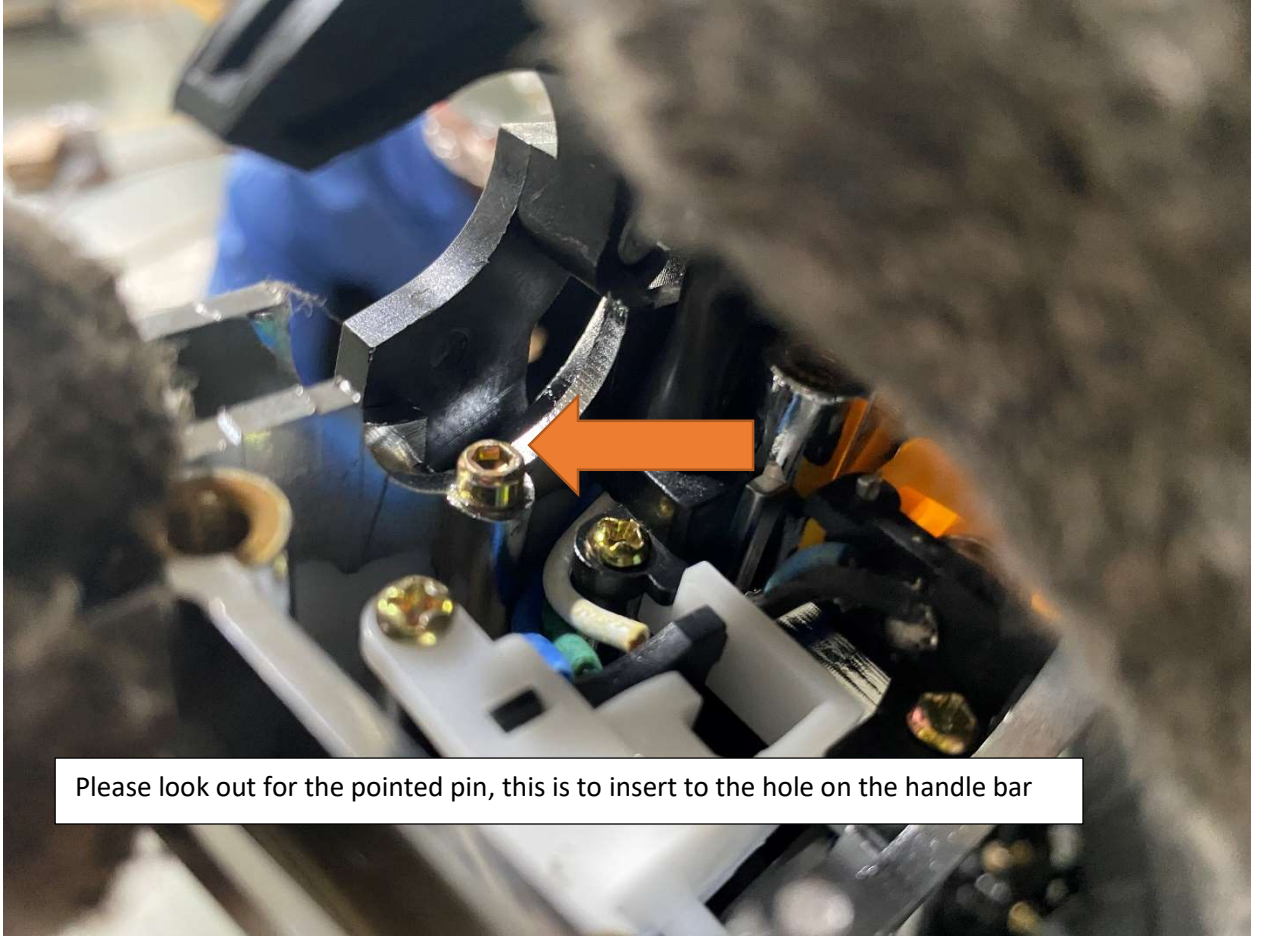

Please look out for the pointed pin, this is to insert to the hole on the handle bar











7. Attach Left Side Clutch Lever Assembly

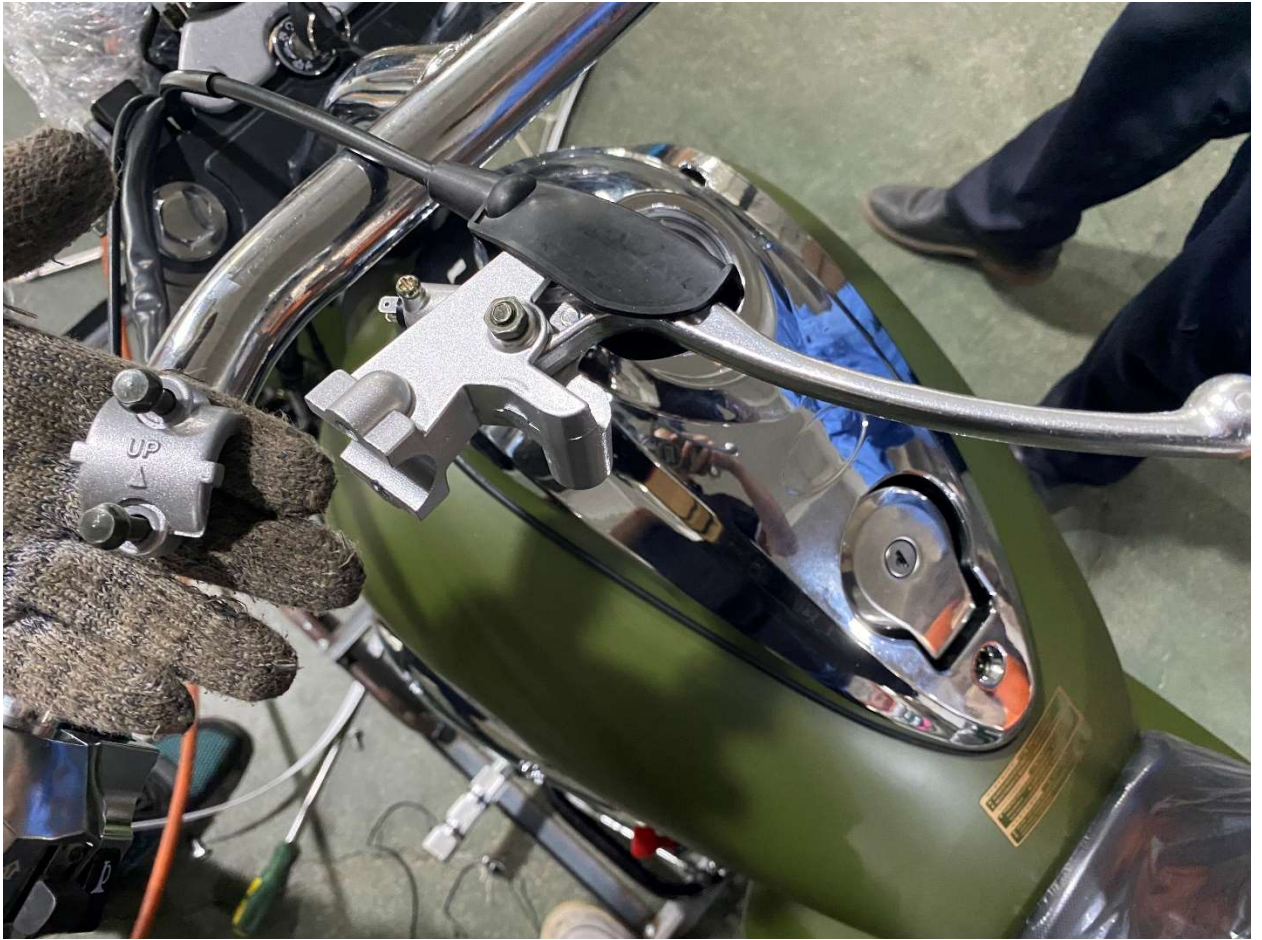






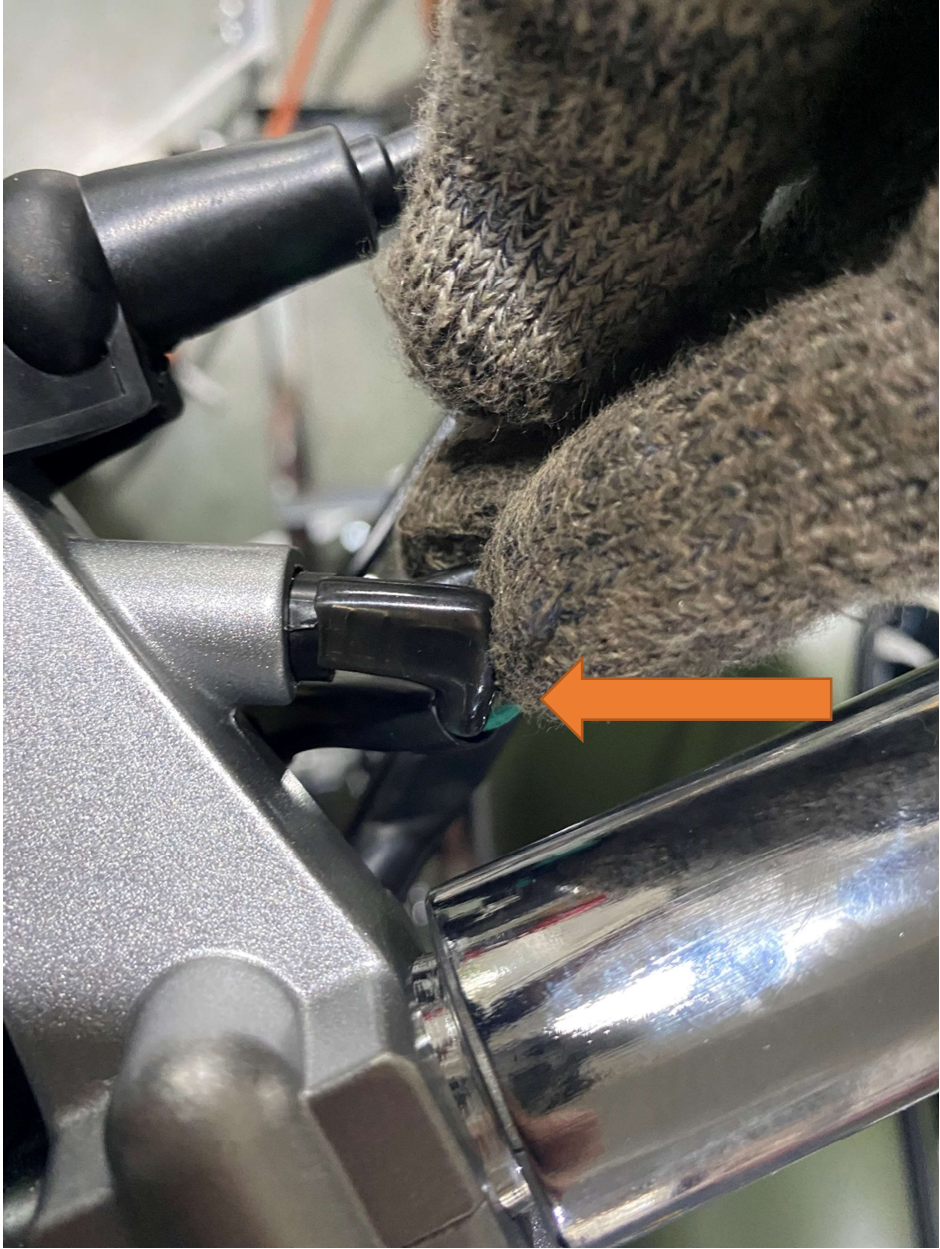

8. Remove Front wheel shaft from the crate



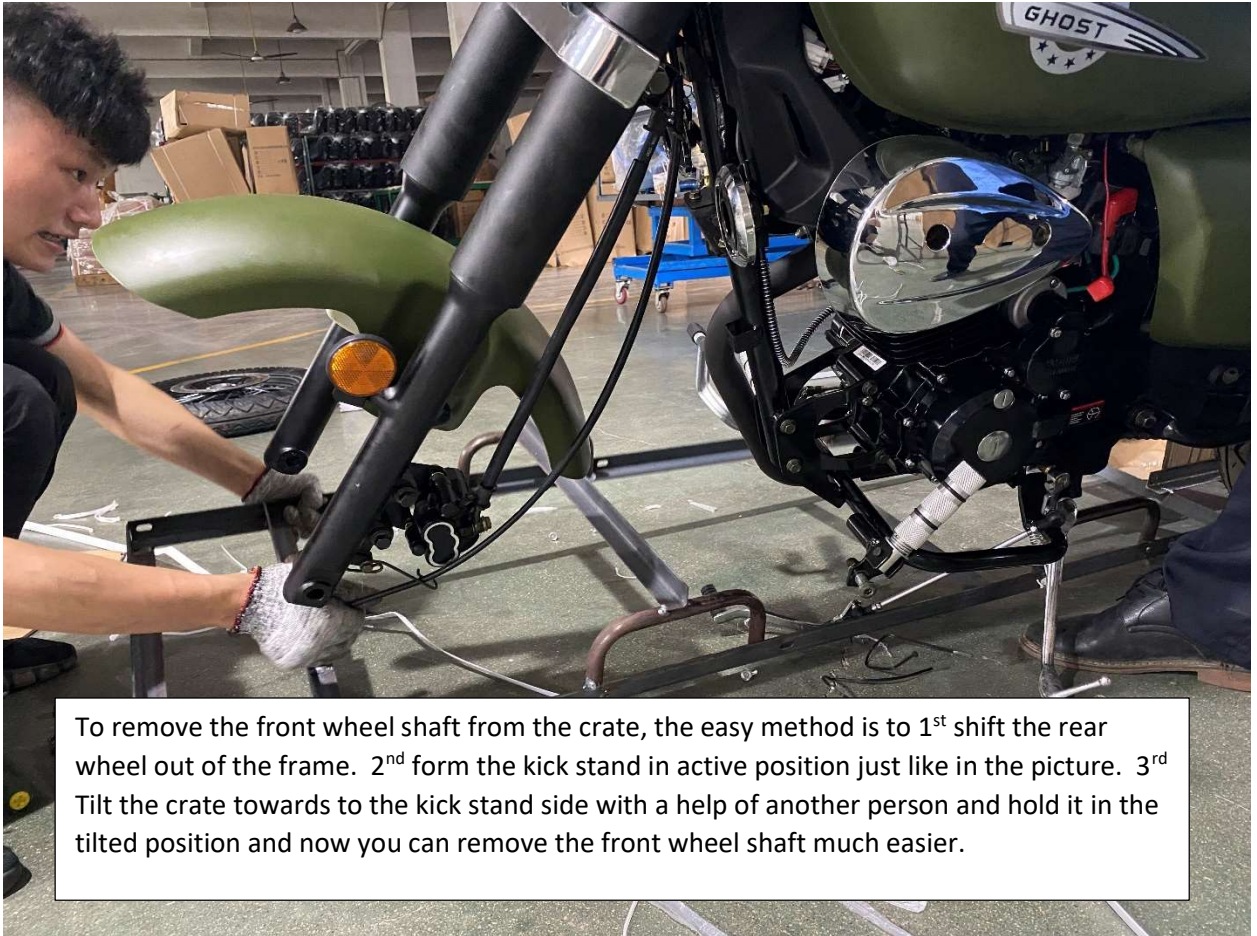

To remove the front wheel shaft from the crate, the easy method is to 1st shift the rear wheel out of the frame. 2nd form the kick stand in active position just like in the picture. 3rd Tilt the crate towards to the kick stand side with a help of another person and hold it in the tilted position and now you can remove the front wheel shaft much easier.



Tilt the frame to the side shown in picture



9. Install Front Wheel











Match the groove on each side to install the speedometer

10. Install Front Brake Caliper









11. Install Foot Gear Lever







Hold the lever using the hand gesture shown in picture to help you install the lever easier



12. Install Mirrors





