DF51AVB Assembly Guide

This ATV is suggested to assemble by professional mechanic only, Red Fox Powersports is not responsible for any damage or accident occur before or during operation by improper assembly.

1. Install Rear drive shaft insert



2. Install Rear wheel



3. Install Rear Suspension Shock



4. Install Rear Tail Bar



5. Install handlebar, Handlebar Grip, Throttle Cable and Brake Cable







6. Install Front wheel, Tie Rod









7. Install Front Disc Brake Cable



- 8. Install Front Bumper
- 9. Install Engine (Remove top black plastic to have an easy fit to the frame)
- 10. Attach Chain (use the chain tension to move the rear drive shaft forward for easy fit and adjust after to proper chain tension lever, the chain should have ¼ inch of play)







11. Install Footrest




12. Install Throttle Cable



13. Mix 2 cycle oil with regular gasoline (ratio 1:32)



14. Make sure the Air and Fuel hose is attached properly

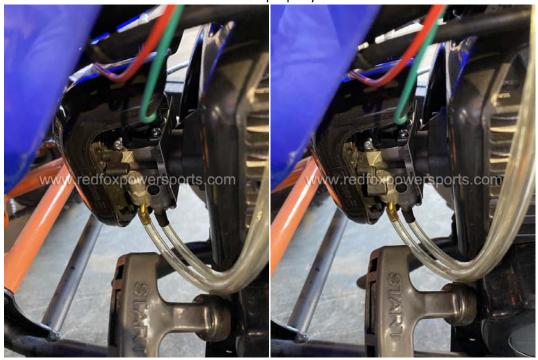

15. Locate pull start lever to start(make sure the kill switch is off)



16. Locate speed limiter screw to adjust the throttle level



