



1. Install Handle Bar



2. Install Front Fender



3. Install Front Wheel

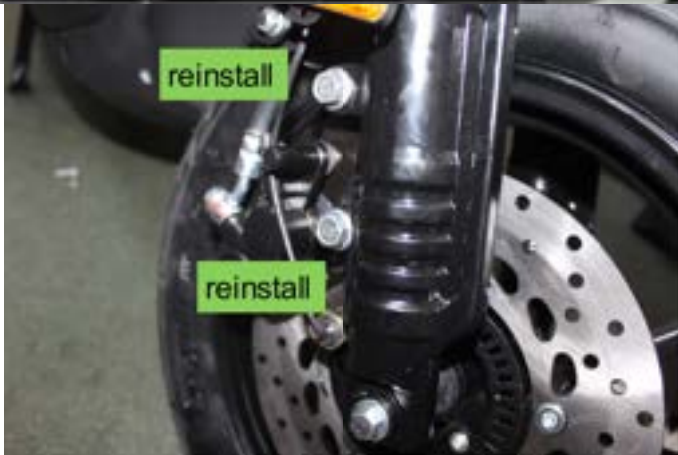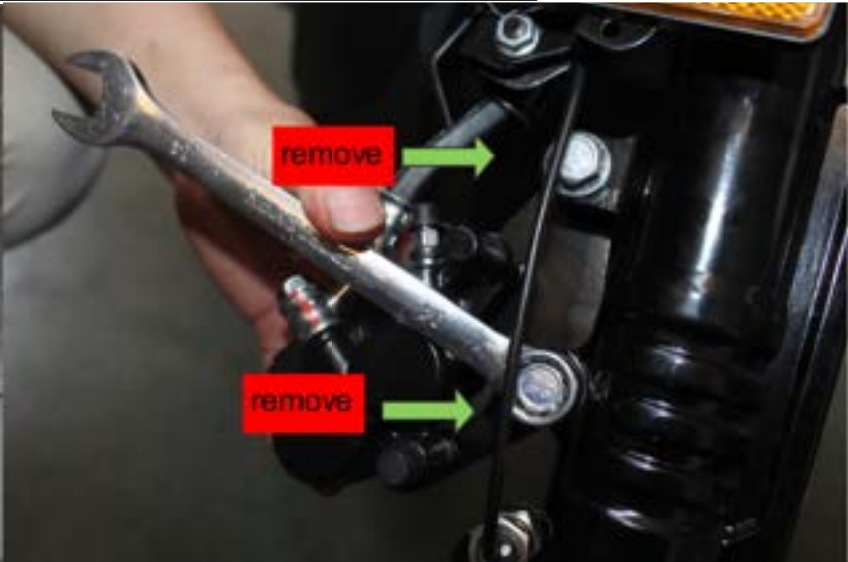

4. Install Metal Guard Rail

tips: the hole is pre-cut with a cover that need to be remove

RedFox
ELECTRIC

RedFox
ELECTRIC

E 200





tips: the bottom bolt with the spacer may be hard to line up, use a screw drive to twist and align for easier installation



tips: semi clip in the plastic piece and then tighten with the top 2 screw. Once screw is tighten, you can go back to clip in the plastic properly alot eaiser.



5. Install Hand Guard



6. Install Mirror



tips: Thread in the mirror first and secure with the gold bolt by turning the opposite way to lock it down to the position you want

7. Install Windshield



8. Install Muffler Heat Guard



tips: pre-install the bolt with spacer and the paper spacer on the muffler for easier installation. Make sure the paper spacer goes to inside to protect the muffler high temperature



9. Install Fan Guard



10. Install Battery and Etc

