

# DF200SVX 零件目录图册



## FOREWORD


When you are going to order parts you may take this booklet as reference but any differences please take the reality on vehicle as standard.

To find out the name, Item code or fitment you may check in the illustration with the size and appearance .Then with the no. in the illustration you will find out the name, item code and quantity.

There will no notice to you ahead of any change of the information in this booklet.



## 曲轴箱总成 (1) Crankcase 1

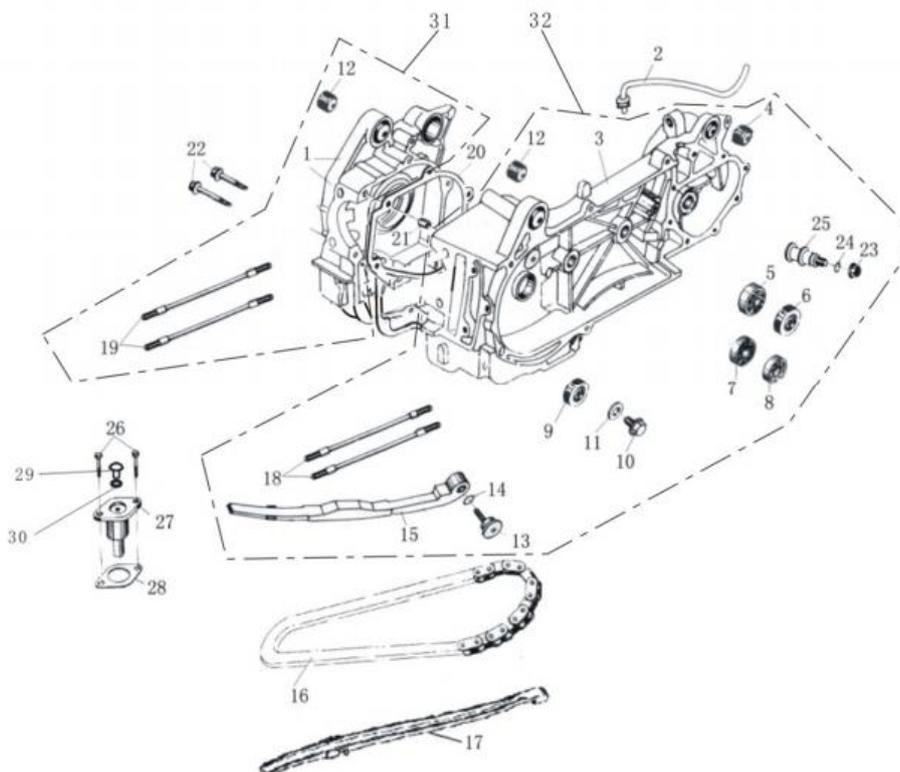


序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	2.20.05.67.02000	右箱体	R.Crankcase Assembly	1		
2	1.20.04.01.12000	通气管组合	Breather Pipe Assembly	1		
3	2.20.04.67.07000	左箱体本体总成	L.Crankcase Assembly	1		
4	1.20.04.01.08000	后减震套	Rear Shock Absorber Sheath	1		
5	1.00.01.6004-2RS	轴承6004-2RS	Bearing 6004-2RS	1		
6	1.20.04.01.10000	输出轴油封27×42×7	Oil Seal of Output Shaft	1		
7	1.00.01.6301	轴承6301	Bearing 6301	1		
8	1.00.01.6002	轴承6002	Bearing 6002	1		
9	1.20.04.01.13000	曲轴油封19.8×30×5	Oil Seal 19.8×30×5	1		
10	1.20.04.01.14000	放油螺栓M12×1.5×14	Bolt M12×1.5×14	1		
11	1.20.04.01.03000	平垫 12×18×1	Rear Gasket 12×18×1	1		
12	1.20.04.01.09000	前减震套	Front Shock Absorber Sheath	2		
13	1.20.13.01.01000	固定拉力杆螺钉	Screw	1		
14	1.20.13.01.02000	O形圈16×1.5	O-Ring 16×1.5	1		
15	1.20.13.01.05000	拉力杆	Tension Rod	1		
16	1.20.13.32.04000	正时链条	Timing Chain	1		
17	1.20.13.01.06000	分气链条导件	Chain Guide	1		
18	1.20.04.06.04000	双头螺柱M8×209	Stud Bolt M8×209	2		
19	1.20.05.06.01000	双头螺柱M8×201	Stud Bolt M8×201	2		
20	1.20.04.01.05000	右箱体垫	Gasket	1		
21	1.20.04.01.01000	定位套 ø8×14	Locating Bush ø8×14	2		
22	1.05.01.09.0650	螺栓M6×50	Bolt M6×50	2		
23	1.05.04.01.0800	螺母SM8	Nut M8	1		
24	1.20.04.01.11000	O形圈7.5×1.5	O-Ring 7.5×1.5	1		
25	1.20.04.03.02000	刹车销	Brake Pin	1		








右箱体端盖总成 (5) Right Crankcase Cover Assy

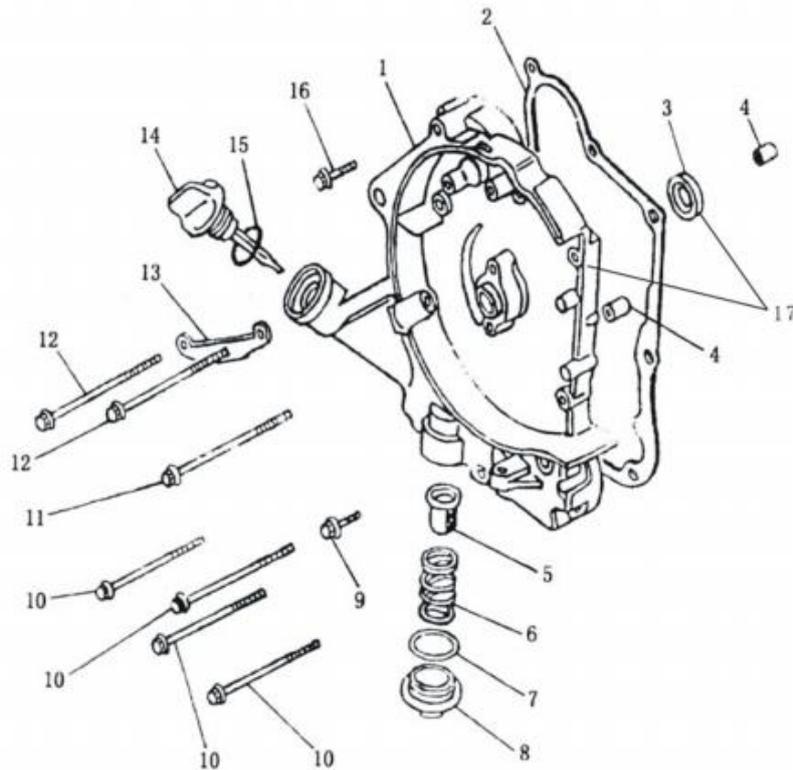

序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	2.20.07.01.01000	右盖	Right Cover	1		
2	1.20.07.01.06000	右盖垫	Gasket,Right Cover	1		
3	1.20.04.01.13000	曲轴油封19.8×30×5	Oil Seal 19.8×30×5	1		
4	1.20.04.01.01000	定位套φ8×14	Locating Bush φ8×14	2		
5	1.20.07.01.09000	滤油网	Oil-Filter Screen	1		
6	1.20.07.01.03000	滤油网弹簧	Spring,Oil-Filter Screen	1		
7	1.20.07.01.04000	O形圈30.5×3	O-Ring 30.5×3	1		
8	1.20.07.01.02000	滤油网螺帽	Oil-Filter Screen Nut	1		
9	1.05.01.09.0632	螺栓M6×32	Bolt M6×32	1		
10	1.05.01.09.0695	螺栓M6×95	Bolt M6×95	4		
11	1.05.01.09.06100	螺栓M6×100	Bolt M6×100	1		
12	1.05.01.09.06110	螺栓M6×110	Bolt M6×110	2		
13	1.20.07.01.08000	触发线卡	Trigger Line Card	1		
14	1.20.07.01.05000	机油尺	Oil Level Gauger	1		
15	1.20.07.01.07000	O形圈18×3	O-Ring 18×3	1		
16	1.05.01.09.0635	螺栓M6×35	Bolt M6×35	1		
17	2.20.07.01.99000	右盖总成	Right Cover Assy	1		



## 气缸头总成 (7) Cylinder Head ASSY

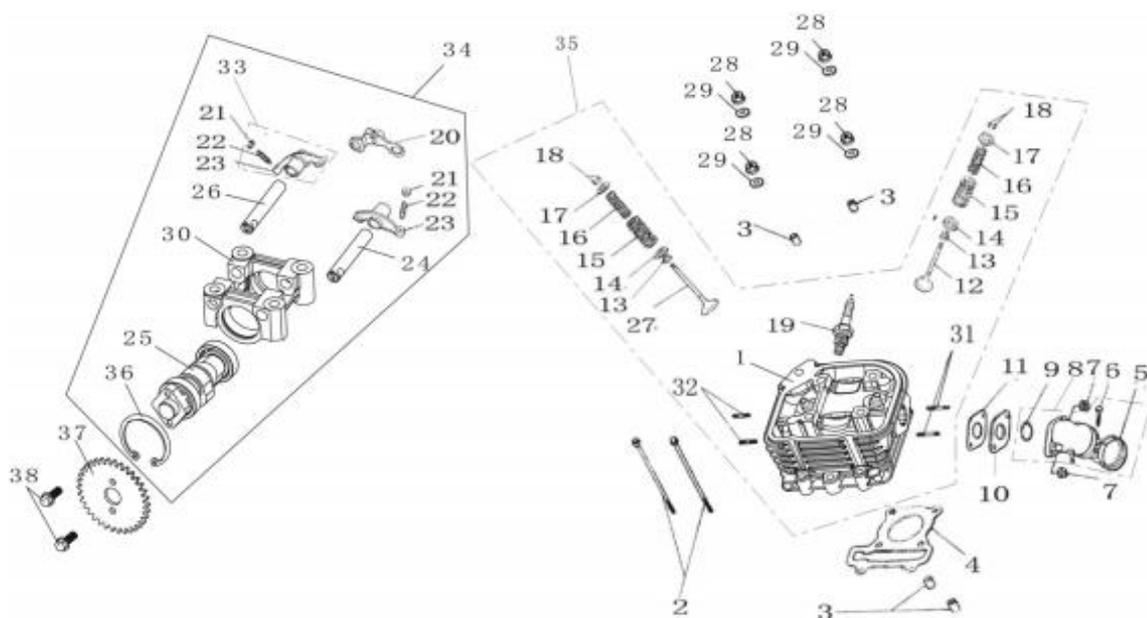

序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	2.20.01.67.13001	气缸头组 (补气状态)	Cylinder Head ASSY	1		
2	1.05.01.09.06100	螺栓M6×100	Bolt M6×100	2		
3	1.20.01.01.01000	定位套φ10×16	Locating Bush φ10×16	4		
4	1.20.01.09.15000	气缸头垫片	Cylinder Head Gasket	1		
5	1.20.01.01.16010	进气管夹	Pipe Clamp	1		
6	1.05.02.01.0425	螺钉M4×25	Screw M4×25	1		
7	1.05.04.02.0600	螺母M6	Nut M6	2		
8	1.20.01.01.16000	进气管总成	Intake-Tube Assy	1		
9	1.00.14.265180	O形圈26.5×1.8	O-Ring 26.5×1.8	1		
10	1.20.01.01.12000	隔热板	Thermal Baffle	1		
11	1.20.01.01.11000	垫板	Base Plate	1		
12	1.20.01.06.06000	进气门	Inlet Valve	1		
13	1.20.01.01.14000	气门油封	Oil Seal,Valve	2		
14	1.20.01.01.10000	垫片	Gasket	2		
15	1.20.01.06.09000	气门外弹簧	Outer Valve Spring	2		
16	1.20.01.06.08000	气门内弹簧	Inner Valve Spring	2		
17	1.20.01.01.05000	气门弹簧座	Valve Spring Retainer	2		
18	1.20.01.01.07000	气门锁块	Valve Cotter	4		
19	1.20.01.01.17000	火花塞	Spark Plug	1		
20	1.20.12.01.05000	止动板组	Stop Plate	1		
21	1.20.12.01.04020	调整螺母	Adjusting Nut	2		
22	1.20.12.01.04030	调整螺丝	Adjusting Screw	2		
23	1.20.12.06.04010	摇臂	Rocker Arm	2		
24	1.20.12.06.03000	进气摇臂轴组	Inlet Rocker Arm Shaft Assy	1		












磁电机部件、机油泵部件

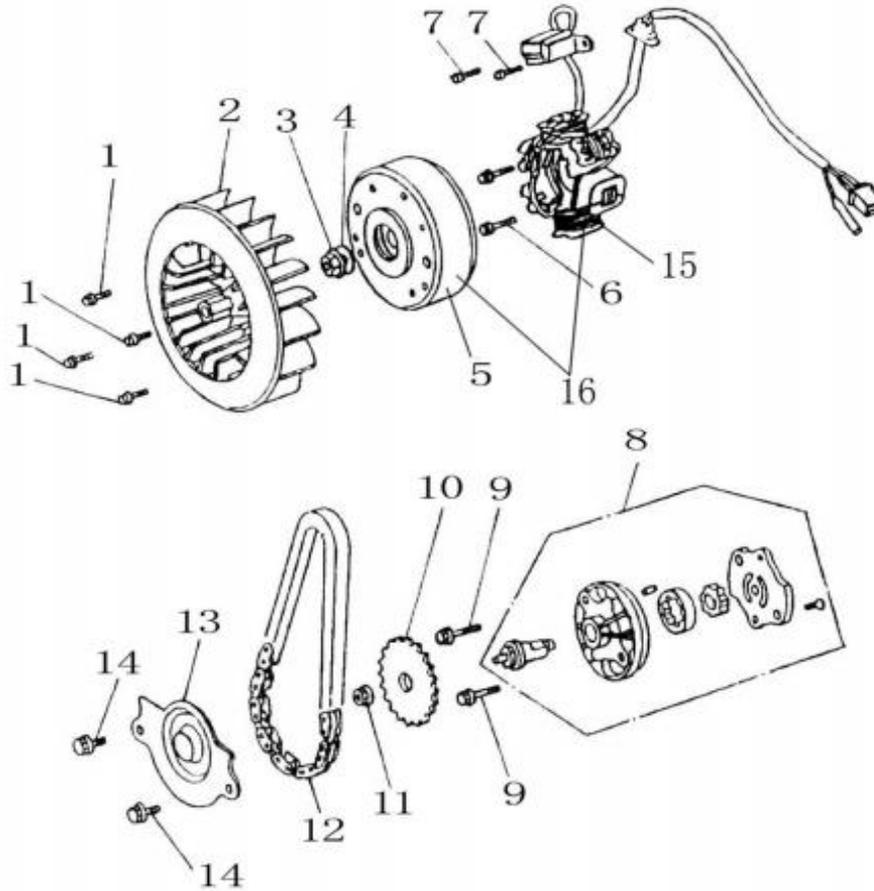

序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	1.05.01.09.0618	螺栓M6×18	Bolt M6X18	4		
2	1.20.24.01.06000	风扇组合	Fan Assy	1		
3	1.05.04.10.1213	螺母M12×1.25 H=10	Nut M12X1.25 H=10	1		
4	1.05.05.04.1201	平垫12-14HV	Washer 12-14 HV	1		
5	1.20.16.01.01020	飞轮	Flywheel(Rotor)	1		
6	1.05.01.09.0620	螺栓M6×20	Bolt M6X20	2		
7	1.05.01.08.0512	六角螺栓M5×12	Hex Bolt M5X12	2		
8	1.20.14.01.03000	机油泵组合	Oil Pump Assy	1		
9	1.05.01.09.0625	螺栓M6×25	Bolt M6X25	2		
10	1.20.14.01.01000	油泵链轮	Oil pump sprocket	1		
11	1.05.04.02.0600	螺母M6	Nut M6	1		
12	1.20.14.01.04000	油泵链条	Oil pump Chain	1		
13	1.20.14.01.02000	链轮端盖	Sprocket side Cover	1		
14	1.05.01.09.0612	螺栓M6×12	Bolt M6X12	2		
15						
15	1.20.16.01.01012	定子组件（直流11级）	Stator (DC 11 pole)	1		
16						
16	1.20.16.01.01002	磁电机总成（直流11级）	Magneto (DC 11 pole)	1		





## 车架和附件 Frame and Accessory



序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	QX-NVX-001	车架	Frame ASSY	1		
2	QX-NVX-002	动力吊架	Engine suspension	1		
3	QX-NVX-003	单撑	Side stand	1		
4	QX-NVX-004	单撑螺丝	Bolt,side stand	1		
5	QX-NVX-005	单撑弹簧	Spring,side stand	1		
6	QX-NVX-006	双撑	Main stand	1		
7	QX-NVX-007	双撑弹簧	Spring,main stand	1		
8	02012333	工具箱盖弹簧支架	Tool box cover spring bracket	1		
9	02012329	电器支架	Bracket, electric parts	1		
10	QX-NVX-008	油箱支架	Bracket, fuel tank	1		
11	02050098	后搁脚（左）	Left pedal ASSY	1		
12	02050099	后搁脚（右）	Right pedal ASSY	1		
13	02012331	后轮泥板支架	Bracket,rear fender	1		
14	02012151	牌照支架	Bracket; license plate	1		
15	02012330	座垫锁板支架	Seat lock plate bracket	1		
16	02012334	油箱外盖锁钩	Fuel tank outer cover locking hook	1		
17	QX-NVX-009	油箱外盖回位簧	Fuel tank outer cover return spring	1		
18	15040008	油箱外盖销轴	Fuel tank outer cover pin shaft	1		
19	12050020	轴用卡簧（油箱外盖）	Shaft snap ring	1		
20						
21						
22						
23						

转向系统、减震系统 SUSPENSION



序 NO	件号 Code name	中文名称 Chinese	英文名称 Description	数量 Q'ty		
1	02030849	方向把	Handle bar	1		
2	QX-NVX-004	左把套	Left handle grip	1		
3	QX-NVX-005	右把套	Throttle handle grip	1		
4	10020103	平衡块	Balancer	2		
5	02030850	下联板	Lower connecting plate	1		
6	12030073	钢碗	Bowl sets	1		
7		六角法兰面螺栓M10X45	Hexagon flange bolt M10X45	1		
8		方向把锁紧衬套Φ21	Steering locking sleeve Φ21	1		
9		六角法兰面自锁螺母M10X1.25	Hexagon flange lock nut M10X1.25	1		
10	QX-NVX-006	前减震器(左)	Front absorber,Left	1		
11	QX-NVX-007	前减震器(右)	Front absorber,Right	1		
12	QX-NVX-008	侧反光片	Side reflector	2		
13	07010239	后减震器	Rear absorber	2		
14	QX-NVX-009	油门线	Throttle cable	1		
15	08020338	座垫拉线	Seater cable	1		
16	QX-NVX-010	座垫副锁线	Seat cushion secondary cable	1		
17	08020339	油箱锁拉线	Fuel lock cable	1		
18	12990047	电子计数器线夹	Electronic counter clamp	4		
19	QX-NVX-011	里程线夹	Mileage clip	1		
20	QX-NVX-012	前碟刹线夹	Front disc brake cable clamp	1		

供给系统 Supply System



序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	QX-NVX-020	油箱	Fuel tank	1		
2	05050001	油箱盖	Fuel tank cover	1		
3	06020236	接油盘	Oil receiving tray	1		
4	QX-NVX-021	油泵	Fuel pump	1		
5	QX-NVX-022	节气门体	Throttle assy	1		
6	QX-NVX-023	高压油管	High pressure tube	1		
7	QX-NVX-024	油泵继电器	Oil pump relay	1		
8	06030001-2	真空管Φ4*7	Vacuum tube Φ4 * 7	2		
9	12010007	油管夹8.5	Oil pipe clamp 8.5	7		
10	12010010	钢丝卡子Φ6	Steel wire clip Φ6	1		
11	06990106	油管卡扣双联	Oil pipe connection	1		
12	01990066	碳罐	Carbon canister	1		
13	01990043	阻断阀	Dump valve	1		
14	01040026	空滤器	Air cleaner	1		
15	191000	空滤器滤芯	Air filter	1		
16	QX-NVX-025	ECU(电子控制单元)	ECU	1		
17	QX-NVX-026	缸温传感器	Cylinder temperature sensor	1		
18	QX-NVX-027	氧传感器	Oxygen sensor	1		
19	QX-NVX-028	消声器	Muffler	1		
20	01990024	排气管垫	Gasket,muffler	1		





电气系统 ELECTRICAL SYSTEM



序 NO	件号 Code name	中文名称 Chinese	英文名称 Description	数量 Q'ty		
1	10080073	套锁	Lock Sets	1		
2	01020011	闪光器	Flasher	1		
3	QX-NVX-060	高压包	Ignition Coil	1		
4	01020021	继电器	Relay	1		
5	10070001	喇叭	Horn	1		
6	QX-NVX-061	左组合开关	Switch ASSY,Left	1		
7	QX-NVX-062	右组合开关	Switch ASSY,Right	1		
8	QX-NVX-063	USB充电器	USB charger	1		
9	10990019	电瓶(12V7A MG7A-BS-C 151*87*105)	Battery(12V7A MG7A-BS-C 151*87*105)	1		
10	QX-NVX-064	仪表	Speedometer	1		
11	QX-NVX-065	整流器	Rectifier	1		
12	QX-NVX-066	电缆线	Harness	1		
13	09010111	大灯总成	Headlight	1		
14	09030111	尾灯总成	Taillight	1		
15	09030112	牌照灯总成	Licence light	1		
16	09020183	前左转向灯	Front Turnlight,Left	1		
17	09020184	前右转向灯	Front Turnlight,Right	1		
18	09020185	后左转向灯	Rear Turnlight,Left	1		
19	09020186	后右转向灯	Rear Turnlight,Right	1		



## PP 外观件 PP Body Covering



序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	03031196	面板中心盖	Panel center cover	1		
2	03031197	面板内衬	Panel lining	1		
3	03031194	头罩	Head cover	1		
4	03031226	挡风玻璃	Windshield	1		
5	03031195	仪表下罩	Instrument lower cover	1		
6	03031207	车架腹板	Chassis belly plate	1		
7	03031220	前泥板后段	Front mud board rear section	1		
8	03031198	前置物箱	Front storage box	1		
9	03031203	前围内装饰板左	Front inner decorative panel left	1		
10	03031204	前围内装饰板右	Front inner decorative panel right	1		
11	03031201	前围装饰盖内衬左	Front decorative cover lining left	1		
12	03031202	前围装饰盖内衬右	Front decorative cover lining right	1		
13	03031234	工具箱开关	Toolbox switch	1		
14	03031227	工具箱内衬	Toolbox liner	1		
15	03031200	工具箱摇臂盖	Tool Box Rocker Arm Cover	1		
16	03031228	工具箱摇臂支架	Tool box rocker arm bracket	1		
17	03031208	脚踏板左	Left foot pedal	1		
18	03031209	脚踏板右	Right foot pedal	1		
19	03031205	油箱中心罩	Fuel tank center cover	1		
20	03031222	座桶	Glove box	1		
21	03031223	怠速保养盖	Idle maintenance cover	1		
22	03031224	座桶右侧保养盖	Right cover of glove box	1		
23	03031218	后挡泥板	Rear fender	1		

**外观件&货架 Body Covering , Carrier**



序	件号	中文名称	英文名称	数量		
NO	Code name	Chinese	Description	Q'ty		
1	03031211	边条左	Edge left	1		
2	03031212	边条右	Edge right	1		
3	03031206	油箱外盖	Fuel tank outer cover	1		
4	03031229	油箱外盖摇臂支架	Fuel tank outer arm bracket	1		
5	03031213	侧盖后段左	Left side cover rear section	1		
6	03031214	侧盖后段右	Right side cover rear section	1		
7	03031199	置物箱盖	Storage box cover	1		
8	03031210	水壶外盖	Kettle cover	1		
9	03031222	电瓶盖	Battery cover	1		
10	05010102	座垫	Seater	1		
11	03031215	尾灯内衬	Taillight inner lining	1		
12	03031216	尾灯下罩	Tail light lower cover	1		
13	03031232	发动机装饰罩	Engine decorative cover	1		
14	03031233	后轮内泥板	Rear wheel inner mud plate	1		
15	03031217	后挡泥板上罩	Rear mudguard upper cover	1		
16	03031193	后转向灯卡片	Rear turn signal card	2		
17	09050002	圆橙色反光片M5	Circular orange reflector M5	2		
18	09050003	圆红色反光片M5	Circular red reflector M5	2		
19	09050001	方反光片M5	Square reflector	1		
20		发动机侧盖装饰罩	Engine side cover decorate cover	1		



